
Digital 1.8 GHz

Welcome

Congratulations on your purchase of a Motorola product! Your Motorola Telephone at a glance:

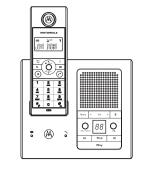





ME7052

ME7060

Installation Guidelines

- . Read and understand all instructions and keep them safe for future reference
- Follow all warnings and instructions marked on the product. 3. Do not install this product near a bath tub, sink or shower.
 4. Do not place this product on an unstable surface. This product may fall, causing
- serious damage to the product. 5. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive
- work to restore the product back to normal operation. 6. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- 7. Use only the power supply that came with this unit. Using other power supplies
- 8. Because cordless phones operate on electricity, you should have at least one phone
- in your home that isn't cordless, in case the power in your home goes out. 9. To avoid interference to nearby appliances, do not place the base of the cordless phone on or near aTV, microwave oven, or VCR
- 10. It is impossible to make emergency calls when the keypad lock is enabled

Technical Amendments

These Operating Instructions are issued for information purposes. Their content is not the subject of a contract.

All indicated data are merely nominal values. The described equipment and options may differ depending on requirements which are specific to each

This device is dedicated to be used in the analog public switched telecomunication

Welcome

For product-related questions, please refer to the Warranty section.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Product, you will need to provide a copy of your dated sales receipt to condfilm warranty status.

Package Contents

Base Station

Mobile Handset

type micro AAA

User's Guide

Telephone Line Cord

Rechargeable Batteri

you ever need to return it.

phone and other equipment.

Mains Adaptor

Complies with the essential protective requirements and objectives of the EC's R&TTE Directive 1999/5/EC; EC Low Voltage Directive 72/23/EEC; EC EMC Directive 89/336/EEC

Copyright © 2007 Motorola, Inc. All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes to content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Motorola may make improvements or changes to the product(s) described in this manual at any time.

MOTOROLA, the Stylized M Logo, and PhoneWrap are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their

2

Installation

Please check the contents of the package carefully. If something is missing or has

directly. (For details, please refer to the Warranty section.)

Setting up the Base Station and Charger Unit

become damaged in transit, you should NOT use the telephone. In such a case you

should return to the dealer with your sales receipt or contact the Motorola's distributor

Note: Retain the packaging of your appliance to prevent it from being damaged should

Place the base station and charger unit in an easily accessible location. Make sure that the location is stable and flat and that the surface is non-slip. When choosing

the location, also make sure that all cables can be routed so as to prevent people tripping over them. Furthermore, avoid placing the base station and charger unit in

the immediate vicinity of other electronic appliances such as microwaves, PCs or Hi Fi's, for example.We recommend a clearance distance of 1metre is kept between the

> Do not expose the base station and charger unit to direct sunlight. Do not allow the base station and charger unit to become wet. They should not be set up in rooms which are subject to condensation or corrosive

steam or a high concentration of dust (e.g. cellars, garages or conservatories). The room temperature must be between 0°C and 35°C.

ENTER NO ENTER NAME

Twin Pack

Important Safety Instructions

Important Safety Instructions

Follow these safety precautions when using your cordless phone to reduce the risk of fire, electric shock and injury to persons or property:

Reduce risk of fire and shock by: 1. Keep all slits and openings of the phone unblocked. Do not set the phone on a

- hot surface or over a radiator. Ensure that proper ventilation is provided at the installation site.
- 2. Do not use while wet or while standing in water. It may result in serious injury. 3. Do not use this product near water (for example, near a bath tub, kitchen sink, or
- 4. Do not allow anything to rest on the power cord. Place the power cord so that it
- will not be walked on
- or aerosol cleaners. Use a damp cloth for cleaning.
- 7. Do not disassemble this product. If service or repair work is required, contact the
- Warranty Service phone number found in the back of this user's guide
- 10. Do not use this cordless phone to report a gas leak, especially if you are in the vicinity of the gas leak.
- Liquid has been spilled into the product.

 If the product becomes submerged in water, Do not retrieve the base
- retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.

3

Connecting the Base Station and Mains Adaptor

Insert the plugs in the corresponding socket of the base station. Route the cable beneath the telephone towards the back. Plug in the telephone plug.Insert the mains adaptor in the wall socket. The base station is now ready for use



Quad Pack

4

4

8

NORMAL RING

VIP RING 1-10

Triple Pack

3

The base station does not have a power switch. Make sure that there is a mains socket nearby and that the mains adaptor is easily accessible. Check that the voltage indicated on the mains adaptor corresponds to that of your mains supply.

Connecting the Charger Unit


Plug the mains adaptor into the mains socket. The charger unit is now ready to use.

Inserting the Batteries

Open the battery compartment, by pushing downwards on the cover. Insert the 2 x AAA (600mAh/1.2V) Ni-MH re-chargeable batteries supplied, observing the correct polarity.



CAUTION: Please do not use Alkaline or non-rechareable batteries. It may cause permanent damage to the unit and void the warranty. Non rechargeable batteries can explode and cause injuries and heavy damage on your



Replace the cover on the battery compartment and push it upwards until it clicks into place. Place the handset in the base station. A confirmation beep and the charging indicator confirm that charging has begun.

Note: For fully discharged batteries, the handset will power on after a 15-minute Note: When used for the first time, allow the batteries to charge for at least 14 hours without interruption. If possible, only take the handset out of the base station when the charging process has ended. This will help to guarantee optimum operation.

Note: To ensure the battery charges properly, clean the charging contacts on the handset and charger with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.

MOTOROLA and the Stylized M Logo are registered in the US Patent and Trademark Office. All other product or service names are the property of their respective owners, © Motorola, Inc., 2007. All rights reserved.

Features

· Prefix dialing

Key input tone on/off

· Automatic call answering on/off

Paging function from base station to

Up to 10 hours continuous call time

Digital Answering Machine with 12

minutes recording time , 59 messages capacity (for Model ME7060)

Operation of up to 4 handsets

Programmable call barring

Up to 100 hours standby

Congratulations on your purchase of this high quality, cordless telephone set. The set offers the following features

- Comfortable digital cordless phone with
- **DECT Standards** • Call ID* function with caller list for 20

User's Guide

- numbers or names from phone book (dependent on network)
- Caller ID* on Call Waiting (dependent on network)
- Alphanumeric LCD display
- · Backlight display
- Phone book for 30 entries with names and Operation with 2 standard AAA
- Extended redialing for 5 call numbers Handsfree (for Model ME7052) Microphone mute
- · Battery and range warning tone
- Keypad lock • 10 ringtone melodies
- · Operator guidance in 10 languages
- Teleconference +

- Internal free communication between
- * user must subscribe to the network's caller id service.
- DECT : Digital Enhanced Cordless Telecommunication

Hands-free Mode (For Model ME7052) There are two methods with which to have telephone conversations in hands-free mode, namely using direct dialing or by switching over during the call.

- 1. Dial the call number and press the key to start dialing. 3. Press the key to end the call.
- Switching During a Call 1. Dial the call number and press the key to start dialing.

Carry out the conversation. Press the key to switch hand-free mode on or off. Press the key to end the call.

Taking Calls When an external call is received, all the handsets registered and the base station

Handset is on the base station/charger cradle

Take the handset from the base station; a connection is automatically established (when the AUTO ANS function is active). Otherwise, press the key.
 Press the key to end the call.
 Handset is not on the base station/charger cradle

Press the key.
 Press the key to end the call.

Prefix Dialling

Press the 0 key for two seconds. 2. Then dial the rest of the digits and press the key to establish a connection.

Note: The prefix number (e.g. an access code) must have been programmed before hand. Refer to "Handset Settings' **Dialling from the Phone Book**

1. Press the key; the first entry in the phone book appears.

- Press the or telephone book.
 Alternatively, enter the first letter of the name required.
- 3. Press the key. The number is dialled. **Paging Handsets** aging nanusets
 you cannot locate a handset you can use the which key on the base to help find it.
 Press the which key on the base.
 All handsets registered to the base will ring and the display on each handset will
- show Paging.

 2. To stop the paging ring, press the) key on the base again, or press any key on the Note: All paged handsets will stop ringing if any key on the handset or page key on

11

Controls and Indication

On Handset and Base

- Arrow keys for navigation in the menu, Menu key and Redial key, Adjust the handset volume
- Cancel/Delete
- Muting function ଷ Phone book Take call/End call key
- OK key to confirm and for internal calls Handsfree/Speaker key(for Model ME7052)

On Answering Machine (for Model ME7060)

- Menu key-press to oper the answering machine menu. -Vol. Volume down(-)-Press to decrease loudspeake volume. Volume up(+)-Increase
- loudspeaker volume Page(Find Handset)key-Press to locate a missing handset/page all handsets registered to the base.
- Rec./ Record/Memo key Memo Use to record your outgoing message or
- Message indicator flashes with the number of new messages. Del. Delete key-Use to delete
- Display icons Indicates the battey charge status/level.
 No bars when battery is empty.
 Indicates that the outside line is engaged.
- Indicates an external call is in progress. Indicates an internal call is in progress. Indicates if you have unanswered calls. (Details available in the caller list).
- Charging indicator Illuminates when the handset is charging in the base station Call indicator Flashes when you have incoming calls. Flashes when there has been a Voice mail received.

Flash (Recall)key, Access a Call Waiting Line/Hold and transfer calls when connected to PABX or for use with network services.

LED: Battery charging indicator

Paging key (call handset)

Replay/previous key During message playback, press to replay the current message or press twice to play the previous message

Stop Stop-Stops message playback.

Next key-During message playback,press to skip forward to the next message.

Ends recording.

LED: Flashes with incoming calls

* ★? Key to view CALL LOG

Key Lock

Play Play

- Indicates that the keypad lock is on. Microphone is muted. Ringer is switched off. Indicates the handset is registered or
- the base. Flashes if there is no link to the base. Scroll(UP) or (DOWN) to see further details of the entry.

BEXT ⊠Y

030 12345

Call Log Operations

IMPORTANT: To use the CALL LOG function, you must subscribe to your network operator's Caller Line Identification (CLI) service Browse, Call Back, Delete, Save If you have subscribed to the Network Caller Display service, the calls list will record

details of any call that arrives. To view the calls list:

1. Press the \$\frac{1}{2}\$ key as often as necessary until the CALL LOG menu appears.
2. Press the \$\frac{1}{2}\$ NT/OK key. Alternatively, press and hold the \$\pi/12\$ key.
3. Press the \$\frac{1}{2}\$ or \$\frac{1}{2}\$ keys to browse through the CALL LOG memory.
4. Press the \$\times\$ key to return the call. Or

5. Press and hold the C key two seconds to delete one or all the entries. Or 6. Press the ■■ key to enter the caller's details in the phone book.
7. Press the INT/DK key

9. Press the INT/OK key.

10. Press the or v key to select the normal ring or VIP ring 1-10. You must subscribe to the network Caller Display service to use the VIP ring feature. If a VIP ring is assigned for that entry, a digit " • " will be shown in front of the name during the incoming call or browsing. 11 Press the INT/OK key to save the entry.

through all the entries. 2. It is only possible to enter caller's details in the phone book who are not already entered. Voice mail service

8. Enter the name.

Voice mail is an automatic answering service offered by your service provider / telephone company.If you subscribe to this service, your service provider/telephone company's voice mail system will answer calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by your service provider /telephone company, not your telephone. Please consult your service provider/telephone company for details of this service.

Note: 1. The CALL LOG symbol and display indicator only disappear after browsing

Changing the Handset Volume

Muting the Microphone

1. Press the VOL+ or VOL- key to adjust the handset volume.

You can adjust the handset volume during a call (external or internal), the volume level is displayed. There are 5 different volume levels.

1. Press the 🛭 key to switch the microphone on or off during a call **Redial Function**

Press the 🏚 key as offen as necessary to view the last 5 Redialled numbers and Press the rekey to dial the Chosen number.

12


Menu Structure


Navigate in the menu structure as follows: Press the Menu key.

Then use the arrow keys to navigate through the menu or select the required menu item directly using the digit keys.

Example: Enter MENU > 3 > to access '1-RINGER' > '2-HS NAME', then enter the HS

1-CALL LOG 2-PHONE BOOK 1-NEW ENTRY 2-LIST ENTRY

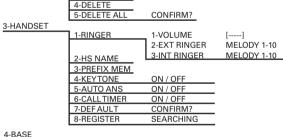

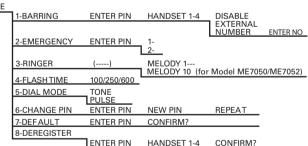

ENTER PIN HANDSET 1-4 CONFIRM? 5-LANGUAGE ENGLISH,DEUTSCH,ITALIANO,FRANCAIS,ESPANOL, PORTUGUES, NEDERLANDS, POLSKI, SVENSKA, TURKCE

Access a Call Waiting Line / Holding and transferring calls (PABX) When on an external call, press R key to access a Call Waiting Line when you hear

the call waiting prompt signal. Press R key again to toggle between the two calls. When on an external call (PABX line) Press R key to put the call on hold.
 Dial the number of the extension.
 Press R key again if you would like to take back the call, or to transfer the call.

Note:you may have to subscribe to a call waiting service. contact your telephone **Teleconference and Intercom Call Transfer**

Intercom Call Transfer It is possible to put an external call on hold and call another handset registered to the base or to forward calls.

1. Press INT/OK key to hold the external call and initiate an internal call. 2. Input the desired handset number (e.g. 2). 3. The target handset will ring. After the internal connection is made, press relation key to transfer the external call.

4. If INT/OK key is pressed before another handset is answered, the call transfel

5. If key is pressed before another handset is answered, both the external and

procedure will be cancelled and the external call connection is regained.

Teleconference

nternal call will be disconnected.

After having received an external call, it is possible to include a second handset in the conversation (three-way conference). 1. Press the INT/OK key and enter the number of the



- corresponding handset (e.g. 2) which should be included in the call. 2. The external caller is put on hold. As soon as handset 2 takes the call, press key to transfer the call to handset 2.
- 3. The external caller is put on hold. as soon as handset 2 takes the call, press and hold # key to activate the teleconference. 4. By pressing the key, any of the handsets can be disconnected from the teleconference and the other handset continues with the external call.

Entering a Dialling Pause (P)

If the MOTOROLA telephone is connected to a PBX system, it may be necessary to insert a dialling pause. To do this, press the key after entering the relevant digit, e.g. 0, for an outside line (0P....). A 'P' appears in the display indicating a pause. The pause can also be entered when programming numbers in the phone

13

Using the Telephone Switching the Handset On/Off

When the handset is placed on the base station or charging unit, it switches on automatically and starts to charge up. Allow the batteries to be charged for 14 hours without interruption the first time they are charged. The telephone does not have an On/Off switch.

Display Backlight

Note: The display backlight switches on automatically when the handset is removed from the charging station or pressing any key. It also lights up when calls are received. It goes out automatically when no key has been pressed for 10 seconds Selecting the Language

Ten different languages are available for selection for each handset. Proceed as follows to select a language:

Press the key repeatedly until menu item LANGUAGE appears. 2. Press the INT/OK key to confirm the item

Press the INT/OK key to confirm the length of the required language. Press the INT/OK key to confirm the selection.

Making Internal Calls If more than one handset is registered on the base station, internal calls can be made free of charge.

Press the INT/OK key. 2. Press the number of the required handset (1.4) and wait for the called party to answer. Press the key to end the call

Note: If an external call is received during an internal call, a beep will be heard.

Making External Calls There are two ways to dial a number, namely direct dialling or on-hook dialling

Direct dialling Press the key and wait for the dialling tone. Dial the telephone number and complete the call.

3. Press the key to end the call. On-hook dialling 1. Dial the telephone number. Delete any incorrect entries by pressing the C key.
 Press the key. The number entered is dialled and a

connection established.

4. Press the key to end the call.



≥ EXT

Phone Book

Phone Book

The MOTOROLA telephone can store up to 30 entries in the phone book with name and number. When the function is supported by the telephone provider service and the caller, the handset displays the name of the caller (when stored in the phone book).

10

1. Press the ★ key as often as necessary until the PHONE BOOK menu appears.
2. Press the INT/OK key.
3. The display will show 1 - NEW ENTRY Press the INT/OK key.
4. Enter the number (max. 25 digits).

Press the INT/OK key.
Enter the name (max 10 characters).

Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. Press the 5 key three times for an L. Delete incorrect entries by pressing the $\,$ C key.

7. Press the INT/OK key.

9. Press the INT/OK key.

Note: 1. If a VIP ring is assigned for that entry, a digit " 📮 " will be shown in front of the name during the incoming call or browsing.

2. If certain phone book entries should appear at the start of a list, e.g. "FIRE", enter a space before the name "FIRE". The space is entered by pressing the 1 key.

Press the type key repeatedly until PHONE BOOK appears.
 Press the INT/OK key.
 Press the or type key to select List Entry.
 Press the INT/OK key.

Press the or ⇒ key to select the required entry. Alternatively, enter the first letter of the name required.

Note: if there is no entry in the phone book, "MEM EMPTY" will display. 6. Press the INT/OK key to view the number

Press the key to dial the number.

14

5. Never insert objects of any kind into the product slits as that may result in fire or

6. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners

8. Do not overload wall outlets and extension cords. Avoid using during an electrical storm.

Unplug this cordless phone immediately from an outlet if: • The power cord or plug is damaged or frayed.

until after you have unplugged the power and phone cords from the wall. Then

The product exhibits a distinct change in performance.

Edit Entries

- 1. Press the 🕏 key repeatedly until PHONE BOOK appears.
- INT/OK key.
- Press the int/UK key.
 Press the or very key to select Edit Entry.
 Press the int/OK key.
 Press the or very key to select the required entry. Alternatively, enter the first letter of the name required.

Note: if there is no entry in the phone book, "MEM EMPTY" will display

- 6. Press the INT/DK key.
- Edit the number.
 Press the INT/OK key.
- 9. Edit the name 10 Press the INT/ΩK key.
- Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. Press the 5 key three times for an L. Delete incorrect entries by pressing the $\,\mathbb{C}\,$ key.

Delete Entries

- 1. Press the 🕏 key as often as necessary until the PHONE BOOK menu appears.
- 2. Press the ♠ or ♦ key to select DELETE / DELETE ALL.
- 3. Press the or key to select the phone book entry. Alternatively, enter the
- first letter of the name required.

Note: The delete process can be stopped at any time prior to confirmation of it by pressing the $\, \mathsf{C} \,$ key several times. if all the entries should be deleted, select DELETE ALL instead of DELETE at Pt. 2.

Base Station Settings

Handset Settings

Changing the Ringer Volume

- (0-5 level, level 0 means ringer off) 6. Press the INT/OK key to confirm the setting
- Changing the Ringer Melody (external/internal) 1. Press the

 key as often as necessary until the HANDSET menu appears.
- Press the INT/OK key twice.
 Use the or \$\forall \text{key to select the required submenu (EXT RINGER or INT RINGER).}
- Press the INT/OK key.
 Use the or two results the required melody.
 Press the INT/OK key to confirm the setting.

Entering/Changing Handset Name

It is possible to assign a name to each handset. This name is then displayed when the phone is in Standby mode.

- 1. Press the ** key as often as necessary until the HANDSET menu appears.
- 2. Press the INT/OK key.

 3. Press the or the key to select the HS NAME submenu.

 4. Press the INT/OK key.
- 5. Enter/Change the name of the handset (e.g. Kitchen 1). Use the $\, \mathbb{C} \,$ key to delete existing characters.

Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. Press the 5 key three times for an L, for example. 6. Press the INT/OK key to confirm the input.

Note: It is recommended to enter emergency numbers in the phone book and to assign significant names (e.g. " DOC", " FIRE").

16

Press the INT/OK key

7. Use the or the or the thing of the thing is the thing of the thing.
8. Press the INT/OK key.

- 1. Press the 🕏 key as often as necessary until the BASE menu appears.
- Press the INT/OK key.

Select Dial Mode

- 3. Press the or the lint/ok key.

 4. Press the or the key to select Dial Mode.

 5. Press the or the key to select Tone or Pulse.

- 6. Press the INT/OK key to confirm the selection.

- 1. Press the
 key as often as necessary until the BASE menu appears.

- Enter the old PIN (0000). Press the INT/OK key.
- Enter the new PIN (e.g. 1111).
- Press the INT/OK key. Enter the new PIN again (e.g. 1111).

Default Settings

- 1. Press the $\stackrel{\diamondsuit}{\Rightarrow}$ key as often as necessary until the BASE menu appears.
- Press the NT/DK key.

 Press the or \$\pi\$ as often as necessary to select the required DEFAULT submenu. Enter the PIN.
- Press the INT/OK key
- 6. Press the INT/OK key to confirm.

Set remote access code

Your Remote Access code allows you to retrieve messages, and record memos and announcements when you're away from your Answering Machine.

1. Press MENU until you hear "Remote access code is 0000 " and the display shows Ac. 2. Press Mor I to set the first digit between 0-9. Press MENU to confirm.

3. Repeat Step 2 until all 4 digits have been set. The machine announces the new code.

Remote Operation

- 3. You can now perform the following functions:
- IF YOU WANT TO

II TOO WANT TO	TILOO
Play messages in a mailbox	1
Repeat / Play Previous Message	4 / Press 4 Twice
Stop playback or recording	5
Play Next Message	6
Delete current message	7
Record a Memo	8, then 5 to Stop
Record Announcement	 then 5 to Stop press 7 to delete the announcement and return to the recorded announcement

Set 'Announce Only' On / Off (preset to OFF)

the diaplay shows "Ao"

Press (or) to swith between the ON/OFF setting.

If you want callers to leave messages, Announce Only must be set to OFF.

f you do not want callers to leave messages, set Announce Only to ON Follow the steps in the beginning of the **Setup** section.

Turn Audible Message Alert On / Off

Press or to swith between the ON/OFF setting. essage Alert programmed **ON**,the Base unit will beep approximately every 10

seconds alerting you to new, unplayed messages and memos. Follow the steps in the beginning of the Setup section to program this feature.

24

Warranty

Selected is **foil Saver** and the display snows 'Nr'.

Press [4] or [4] to swith between the **Number/Toil Saver** setting.

Your Answering System can answer after 2-6 rings or you can choose the Toil Saver option. The Toil saver option instructs the Answering System to answer after 4 rings only if there are new, unplayed messages; otherwise, it will answer after 6 rings. The benefit to you is if you are making a long distance call to retrieve messages, if the Answering System does not answer after 4 rings, you can hang up. There are no new messages, and you will save the expense of a long distance call. To set the number of rings to answer, follow the steps in the beginning of the Setup section.

Set Number of Rings to Answer

a Memo at the Base

Press and hold REC/MEMO.

You will hear 'Now Recording', followed by a beep. 3. Speak towards the Base Unit. Press STOP when finished. Your memo is stored

like a message from an outside caller To record a memo from a remote location, follow instructions in the Remote Operation

Note: If memory is full while recording, the answering machine will announce "memory is full" and a beep is heard, at the same time the 7-segments LED will display "Fu" and the message count alternatively.

of unplayed messages.

For old messages this can only be seen by the play key led being on steady. The display will show 00 with either no messages at all or old messages, so cannot be used as an indicator.

25

Default Settings

you have changed are returned to their default values. The phone book entries are

- Press the

 key as often as necessary until the HANDSET menu appears.

 Press the INT/OK key.

 Press the or

 key to select Default.

 Press the INT/OK key.

The handsets can be reset to the default settings. In doing so, all the settings which

- 5. Press the INT/OK key to confirm input
- **Handset Default Settings** Melodv1 Prefix Number **Empty**

External Ringer Melody

VIP Ringer Melody Melody2 Language English Ringer Volume Auto Answer ON DECT Receiver Volume Level 4 Handset Name On/Off ON call timer On/Off ON

Registering Additional Handsets

Note: The handset is reset to its default settings.

Further handsets can be registered on the base station. They must support the GAP standard, however, it is possible that some of the handset functions will not be available. Note: you only need to do this to replace a faulty handset

- 1. Press the 🕏 key as often as necessary until the HANDSET menu appears.
- 2. Press the INT/OK key.

 3. Press the Nor or key to select the REGISTER submenu.

 4. Press the INT/OK key.
- 5. Press and hold the Page key on the base station, then enter the PIN when $\,$
- requested. (Default setting = 0000)
- 6. Press the INT/OK key.
- Note: After the connection has been established, the name and number of the handset

(the next available number if less than 4 are already registered) appears in the display.

18

Answering Machine Operation

(for Model ME7060)

General

 In the idle (standby) mode, press MENU to program each of the following options: Turn Answering Machine On / Off Set the Day and Time

Record your outgoing Announcement Set your Remote Access code

Set 'Announce Only' On / Off Turn audible Message Alert On / Off Set Base ringer On / Off

Set number of Rings to answe Repeatedly press the **MENU** key to step through the answer machine options.

The current setting of each is announced. 2. Once the desired option is reached and the current setting of each is announced,

press of or to change the setting.

Note: It is not possible to change the A1 or A2 setting at this time

3. Press **MENU** to confirm your setting. 4. At any time, press STOP to exit setup mode

Switch Answering Machine ON/OFF (preset to ON) When you first switch on your phone, the answering machine is in the ON mode.

1. Press **MENU**. Until you hear 'answer on' or 'answer off' and the dispaly shows 'An', press **⋈** or **⋈** to switch between the On/Off setting.

Clock Setting Follow the steps above to program the current Day of the week, then the Hour, and then the Minute

First, program the Day. As you program, the display shows'd' and a number, 1 to 7, representing the day of the week 1 represents Monday; 2 represents Tuesday, and so on. Press MENU when done. Next, program the $\operatorname{{\tt Hour}}$. Be careful that you program $\operatorname{{\tt pm}}$ if the current time is in the afternoon or evening, or an am if the current time is after midnight or in

the morning. Press **MENU** when done. Next, program the Minute. You'll be programming the 'tens' column first. Your choices are 0 through 5, as the minutes range from 00 to 59. Press **MENU**. Now, you are programming the 'ones' column, where your choices are 0 through 9. Press **MENU**

Note: If the mains power to the base is lost, your answer machine will display "St." (Set time) to remind you adjust the clock when it is switch on.

22

Message Playback

to confirm.

1. Press the **Play** key. The prompt will tell you

how many new and old messages are stored in that Mailbox. If there are one or more new messages, only the new messages will be played. After new message playback is completed, you can press the **Play** key again to hear

Note: If you short press the Play key, the order of playback is oldest messages first, newest last. If you long press the Play key, the order of playback is newest

Before each message is played, the day and time it was recorded is announced

2. Press | to replay the current message from the beginning Press wice to play the previously recorded message

3. Press I to skip to the next message.

4. Press STOP at any time to end playback.

Deleting Messages To delete the message or memo currently playing, press DEL

To delete all old messages stored 1. In the idle mode, press and hold **DEL**. You will hear "All old Messages are Deleted"

2. All old messages will be deleted

NOTE: New,unplayed messages cannot be deleted until you play them. Once you have deleted the message/s, it cannot be recovered.

There is a total of 12 minutes of record time. This includes messages, memos, and

Important information

The maximum number of messages that can be stored is 59

A message, memo, or announcement can be a maximum of 60 seconds

If a call comes in while you are listening to messages, playback automatically stops.

· All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.

Products rented on a temporary basis.

· Periodic maintenance and repair or replacement of parts due to normal wear and Note: The talk-time, stand-by time and total life cycle of the rechargeable batteries

configurations. As a consumable product, the specifications indicate that you should

26

be able to obtain optimum performance for your digital cordless telephone within the first two months from date of purchase. The warranty for the rechargeable batteries becomes void if (i) the batteries are charged other than by original battery chargers specified for the charging of the battery, (ii)

any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the digital cordless telephone for Depending on operating conditions and your usage habits, wear and tear might take place of components including mechanical problems related to Product housing, paint,

assembly, sub-assemblies, displays and keyboards and any accessories which are not part of the Product's in-box configuration. The rectification of faults generated through wear and tear and the use of consumable items like batteries is considered to be your responsibility and therefore the Distributor will not provide the free Warranty repair service for these items.

OUT OF WARRANTY REPAIRS

If you request the Distributor to repair your Product any time after the Warranty term or where this warranty does not apply due to the nature of the defect or fault, then

the Distributor its fees for such a repair or it may refer you to an authorised third party to carry out such repairs.

30

("PRODUCT(S)") TO YOU, THE END-USER. A LIMITED WARRANTY FOR THIS PRODUCT IS PROVIDED TO YOU BY MOTOROLA'S DISTRIBUTOR ("DISTRIBUTOR") PURSUANT TO DOCUMENTATION INCLUDED WITH THIS PRODUCT. PLEASE CONTACT THE DISTRIBUTOR IF YOU EXPERIENCE PROBLEMS WITH THIS PRODUCT.

Warranty

THAT BIND THE MANUFACTURER, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY AGAINST INFRINGEMENT PROVIDED UNDER ANY LAW, AND (B) IN NO EVENT SHALL MOTOROLA BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION OR ANY OTHER PECUNIARY LOSS), OR FROM ANY BREACH OF WARRANTY, EVEN IF MOTOROLA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. MOTOROLA SHALL NOT BE BOUND BY PRODUCT RELATED STATEMENTS NOT DIRECTLY MADE BY MOTOROLA NOR ANY WARRANTY OBLIBATIONS APPLICABLE TO THE DISTRIBUTOR.

WARRANTY INFORMATION

Alcom Electronics Pte Ltd.(Distributor) guarantees to you, the original purchaser, the digital

cordless telephone and accessories which you have purchased from an authorised reseller (the "Products"), to be in conformance with the applicable specifications current at the time of manufacture for a term of 12 months from date of purchase of the Product(s) (Warranty Term). You must inform the Distributor of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, and must mmediately submit the Product for service to the Distributor's Repair or Service Centre. During the Warranty term, the Distributor will, at its discretion and without extra charge,

HOW TO GET WARRANTY SERVICE?

In some cases, you may be requested to provide additional information concerning the maintenance of the Products by the Distributor's Service Centres only, therefore it is important to keep a record of any previous repairs, and make them available if questions arise concerning maintenance.

presented or if the information is incomplete, illegible or incompatible with the factory records. Repair, at the Distributor's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All original accessories, batteries, parts, and digital cordless telephone that have been replaced shall become the property of the Distributor. The Distributor does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.

The Distributor will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by the Distributor which is attached to or used in connection with the Products.

supplied for this digital cordless telephone by the Distributor, the Distributor does not warrant the operation of the Product/peripheral combination and the Distributor will not honour

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons. The following are examples of defects or damage not covered by this product warranty · Defects or damage resulting from use of the Product in other than its normal and

 Defects or damage from improper testing, operation, maintenance, installation adjustment, unauthorised software applications or any alteration or modification

 Products disassembled or repaired other than by the Distributor in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify

any warranty claim. Defects or damage due to range, coverage, availability, grade of service, or operation

28

5. Enter the PIN. Note: (Factory setting is 0000). 6. Press the INT/OK key.
7. If necessary, use the or very key to select the handset.

9. Press the INT/DK key to confirm the selection.

Note: You only need to do this to replace a faulty handset.

mutually. The last handset cannot be deregistered.

Base Default Settings

PIN NO - 0000

Delete HS

DIAL MODE - TONE

FLASH TIME - 600ms

EMERGENCY NO - EMPTY

Saving a Prefix

2. Press the INT/OK key.

pressing the 0 key for two seconds.

6. Press the INT/OK key to confirm the input.

Activating/Deactivating Call Timer

Switching the Key Tone On/Off

It is possible to save prefix numbers in the handset. This number is then recalled after

Enter the prefix number (e.g. access code of the person you call most frequently).

The automatic call answering function enables the incoming call to be taken immediately

the handset is removed from the base station. It is not necessary to press the call key after removing the handset from the base station/charger cradle.

It is possible to display the duration of a call on the handset. The timer starts when

Note: Even with the call timer off, the total call duration is shown at the end of the

17

If several handsets are registered on one base station, they can deregister each other

1. Press the 🕏 key as often as necessary until the BASE menu appears.

1. Press the

key as often as necessary until the HANDSET menu appears

2. Press the INT/OK key.
3. Press the iNT/OK key.
4. Press the iNT/OK key.
5. Use the or in the call timer on or off.
6. Press the INT/OK key to confirm the setting.

1. Press the 🕏 key as often as necessary until the HANDSET menu appears.

1. Press the | NT/OK | key.
2. Press the | or | con | con

Press the key as often as necessary until the HANDSET menu appears

1. Press the 🕏 key as often as necessary until the HANDSET menu appears.

Activating/Deactivating Automatic Call Answering

21

Turn Base Ringer On / Off (preset to ON)

Press \mathbf{MENU} untill you hear "Base Ringer is \mathbf{ON} " or " \mathbf{OFF} " and the display shows Press **⋈** or **⋈** to swith between the **ON/OFF** setting. Your Base Ringer is independent of the Handset ringer. To program this feature, follow the steps in the beginning of the Answering Machine section.

Press MENU untill you hear "Number of ring selected is Two" or "Number of ring selected is Toll Saver " and the display shows "Nr"

Recording a Memo either at the Base Unit or from a remote location. To record

Listening to Your Messages When you have new messages, the message counter will flash, showing the number

The unit will flash with the number of new messages. also the play key LED will flash.

Recorded messages and memos are retained until you delete them If its capacity is full, the system will answer after 10 rings, and the caller will hear "Memory is full".

This warranty will not apply if the type or serial numbers on the Product has been altered, deleted, duplicated, removed, or made illegible. The Distributor reserves the right to refuse free-of-charge warranty service if the requested documentation can not be

When the Product is used in conjunction with ancillary or peripheral equipment not

any warranty claim where the Product is used in such a combination and it is determined by the Distributor that there is no fault with the Product. WHAT IS NOT COVERED BY THE WARRANTY

customary manne Defects or damage from misuse, access to incompatible sources, accident or neglect.

Breakage or damage to antennas unless caused directly by defects in material or

of the cellular system by the cellular operator. Defects or damage due to moist, liquid or spills of food.

29

Changing the Flash Time

 Press the or as often as necessary to select the FLASH TIME submenu.
 Press the or soften as necessary to select the FLASH TIME submenu.
 Press the or key.
 Press the or key.
 Press the or key. Note: The default time for Flash in SINGAPORE is 600ms

Press the key repeatedly until BASE appears. 2. Press the INT/OK key.

Press the INT/DK key. Press the or as often as necessary to select the CHANGE PIN submenu.

Press the INT/OK key.

The remote access code helps prevent unauthorised people from ringing up your answering machine and listening to your messages. The code can be any 4-digit number, from 0000 to 9999. The pre-set code is **0000**.

1. Call your answering machine from any touch-tone phone.
 2. When you hear your outgoing announcement, enter your 4-digit Remote Access

Press MENU untill you hear "Announce Only is ON" or "Announce Only is OFF" and

Press MENU untill you hear "Message Alert is ON" or "OFF" and the display show "AL".

as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The digital cordless telephone should also clearly display the original compatible

for your digital cordless telephone will depend on usage conditions and network

which it is specified.

Please make and retain a note of all data you have inserted into your Product for example names and phone numbers, before submitting your Product for a Warranty service as such data may be deleted or erased as part of the repair or service process.

the Distributor may in its discretion carry out such repairs subject to you paying

11.Press the ♠ or ♀ key to select the normal ring or VIP ring. 12.Press the INT/OK key.

4. Press the INT/OK key to confirm the input.

The following options are available for selection for barring calls:

1. Press the key as often as necessary until the BASE menu appears 2. Press the INT/OK key.

Note: All numbers which start with the barring number will be barred,

Entering/Changing Emergency Number

Only set to OFF, allowing callers to leave a message

Recording Announcement A1 (Announce Only set to OFF) 1. Press MENU until you hear 'Announcement One'

not satisfied, record your announcement again.

the latest recorded announcement).

toward the Base Unit. You have up to 60 seconds for your annuannouncement must be at least 3 seconds in length.

are dialled even if the unit is only programmed for internal calls. 1. Press the \$\frac{1}{2}\$ key as often as necessary until the BASE menu appears.

e.g. if 07 is stored as the barring number then all numbers starting with

2. Press the INT/OK key.

3. Press the int/OK key.

4. Press the INT/OK key.

Outgoing Announcement ${\bf A1}$ is played when Announce Only mode is OFF. Callers

2. Press **REC/MEMO** . You will hear 'Now Recording' followed by a beep. Speak

3. Press STOP when finished. Your recording will be played automatically. If you're

announcement and the answering machine will use the default announcement

can leave a message in this mode. Your answering machine is preset with Announce

Barring Calls

Description All telephone calls are possible EXTERNAL All external calls are barred. NUMBER Define a number which should be barred, e.g. 0190.

 Press the as often as necessary to select the BARRING submenu.
 Press the INT/OK key.
 Enter PIN . Note: (Factory setting is 0000). 8. Press the INT/OK key.

7. Use the or key to select the handset which should be barred.

8. Press the INT/OK key.

9. Use the or key to select DISABLE or EXTERNAL.

10. Press the INT/OK key.

Barring Numbers 11. Use the (up) or (down) key to select NUMBER. 12. Press the INT/OK key. 13. Enter barring number (max 5 digits).

07 will be barred.

14. Press the INT/OK key.

Emergency numbers are free of any restrictions, i.e. they can still be called even if barring of any kind is set. Note: It is impossible to make emergency calls when the keypad lock is enabled. Before emergency numbers can be used, they must be stored. Two emergency number 112 and 999 are already stored for you. The emergency numbers can then be dialled manually or from the phone book if they are stored there. Two different emergency numbers (maximum of five digits) can be programmed. Example: Three-digit emergency number = 123. All numbers which begin with 123

5. Enter the PIN. Note: (Factory setting is 0000). You can record 2 different outgoing announcements: A1 inviting your caller to leave a message (Announce Only OFF), and A2 asking your caller to call back later (Announce

Outgoing Announcement ${\bf A2}$ is played when Announce Only mode is ON. Callers cannot leave a message in this mode. If you do not record your own announcements, your answering system will play a pre-programmed message to your callers: "Please leave your message after the beep." "I am sorry that I am not available. Please call back later." How to Record Your Announcement

Recording Announcement A2 (Announce Only set to ON) Follow the same steps as recording Announcement A1. However, this time you will hear 'Announcement Two' since you have set Announce Only to ON. To Review/Delete You Announcement A1/A2 1. Press MENU until you hear ' Announcement One' (Announce Only set to OFF) or'Announcement Two' (Announce Only set to ON).

Note: The default announcement cannot be deleted

TO THE FULLEST EXTENT PERMITTED UNDER APPLICABLE LAW (A) MOTOROLA HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND RELATING TO THE PRODUCT

into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term. For details, please contact : Alcom Electronics Pte Ltd 37 Kallang Pudding Road, #05-08, BLK-B Tong Lee Building, SINGAPORE 349315. PH: (65) - 68412668 FAX: (65) - 68412628 E-MAIL: support@alcom.com.sg

electronic serial number. Such information is contained with the Product. You must ensure that all and any repairs or servicing is handled at all times by a Distributor's Service Centre in accordance with the Distributor's Service requirements.

Changing the PIN

10. Press the INT/DK key.

20

Turn System On /Off Play Help Menu

2. Press Play, you will hear the announcement of A1 or A2 (you can only review 3. During playing the announcement of A1 or A2, press DEL to delete the current

23

WARRANTY INFORMATION MOTOROLA DOES NOT WARRANT ITS CORDLESS TELEPHONE PRODUCTS

27